



MAINTENANCE INSTRUCTIONS

- CLEANING AND MAINTENANCE
 - Always protect the floors when moving heavy objects to prevent permanent scratches and tears.
 - Use appropriate wide floor protectors under tables, chairs and any heavy furnishing to avoid permanent damage.
 - Place walk off mats, without rubber backing at all entrances. This helps in protecting the floor from water, grease, sand and dust.
 - During peak sunlight hours, the use of blinds or curtains is recommended. Prolonged direct sunlight can result in discoloration and volatile temperature variations can cause damage to the floor.
 - Do not allow solvent into the seams, as this may cause damage or become moldy.
 - Routine cleaning is important to prevent particles from abrading the surface of resilient floors.
 - Clean the floor surface regularly.
 - Use a dry cloth or vacuum cleaner for general cleaning.
 - When wet wiping with water or any cleaning liquid, squeeze out all water before wiping surface.
 - A polyurethane cleaner can be used for heavy soiling.
 - All stain-forming and aggressive substances must be removed immediately.
 - The installed floor should be maintained at a temperature of 13°C and 30°C throughout its service life.