



## FLUSH STAIR NOSE

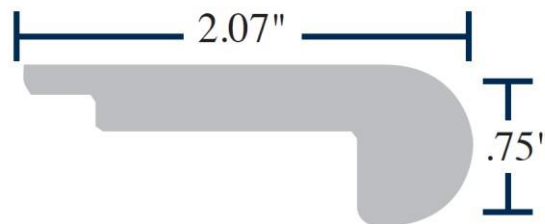

Nosing – also called stair nosing, bull nose, stairwell trim, landing tread. Thickness same as flooring. Used to create finished edge on top step, around stairwell, sunken living room, etc.

Typical stair assembly layout is pictured below:

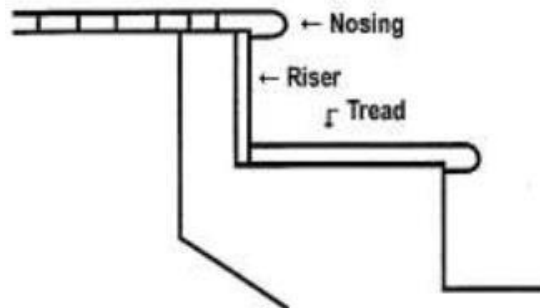

### Installation Steps - Flush Mount Stair Nose

1. Measure and cut nosing to fit, dry fit the molding to ensure an adequate fit.
2. Scuff/Abrade the underside of the nosing with coarse sandpaper.
3. Clean/wipe the underside of the nosing with denatured alcohol & allow to dry.
4. Prep the substrate, remove any surface contaminants (and/or) moisture.
5. Apply premium construction adhesive liberally in an "S" pattern. Loctite Power Grab Ultimate
6. Slowly insert the nosing, ensuring a flush fit to the stair edge and butt tightly against flooring.
7. Apply direct pressure and secure with weights or sandbags (or) pre-drill and insert finish nails (depending on local building code requirements).
8. Fill nail holes with a colored sealant.